

Model Code 871
Hockey

Horn	Misc. Shot Time	Set	Time Out Timer Start	7	Time Out Timer Clear	Options	Yes	Cancel
Penalty On Off	Penalty Insert	Penalty Time	8	8	9	No	Chronometer Time of Day	
Penalty On Off	Penalty Clear	Home Penalty	4	5	6	Home Score	Guest Score	
Alternate Time Control	Home Goal	Guest Penalty	1	2	3	Blank		
Time On	Guest Goal	Home Shots		Blank	0			
Time Off		Guest Shots						

Nevco, Inc. • 800-851-4040 USA • 800-461-8550 Canada
www.nevco.com

12/15/10
 12/15/10
 12/15/10
 12/15/10
 12/15/10

Turning On Clock	Switch on right side operates main clock - Switch on left operates shot clock.
Turn Clock 'On'	With switch on right side of clock. You will be prompted with:
"Do you want to start where left off?"	No
Mode	871 (Hockey)
"Do you want to use shot clock?"	Yes. If it does not ask this, you must shut off the clock and turn on starting over until it asks this question.
"Do you want to use Penalty time out?"	No
Enter Period:	Set - Time - 20:00.0-Yes-Period 1
Set Clock	
Set	
Time	
20:00.0	Or, set the appropriate time on the clock - 05:00.0 for breaks between periods
Period 1,2 or 3	Depends on which period the game is in.
Set Penalty	
Set	Depends on which team is receiving the penalty
Home Penalty or Guest Penalty	Most penalties are two minutes - if otherwise you will be notified by the refs.
02:00.0	
Yes	
Player #	Enter the first digit of the player's jersey # then enter second digit with the whistle.
	The penalty should commence with the start up of the game.
	You can set up another penalty for the same player by repeating the process.
	The second penalty does not show on the board until the first one has run out.
Clear Penalty	
Home Penalty or Guest Penalty	ie if the home team is serving a penalty and the guest team scores then the penalty is over (or vice versa). If there are multiple penalties on the board, continue to press home penalty or guest penalty to scroll through all the penalties for that side. Then select which one you want to clear.
Penalty Clear	
Yes	
Setting Scores	
Home Score or Guest Score	
plus 1	Will indicate a score of 1.
plus 1	Will indicate a score of 2 and so on.
Correct Scores	
Set	
Home Score or Guest Score	
Press Correct # or	
Blank clears the board	

